

B10-3搅拌机爆炸图零件明细表

序号	名称	代号或规格	齿数	数量	序号	名称	代号或规格	齿数	数量
1	电机蜗杆	B10B-01-04		1	57	拨叉	B10K-03-05		1
2	油封	SG17×35×10		1	58	拨叉用顶销	B10B-03-06		2
3	轴承	203		1	59	拨叉用弹簧	B20F-03-11		2
4	电机转子	B10K-01-02		1	60	拨叉用螺母	B20F-03-12		2
5	电机定子	B10K-01-01		1	61	变速芯轴	B10B-03-02		1
6	离心开关动片			1	62	钢球	B20F-03-05		2
7	离心开关静片			1	63	档位用弹簧	B20F-03-06		2
8	轴承	203		1	64	变速手柄	B20K-03-01		1
9	电机端盖	B10K-01-03		1	65	变速座	B10K-03-03		1
10	风叶			1	66	半圆头螺钉	M6×12		4
11	轴承	101		1	67	轴用卡簧	18		1
12	输入轴	B10K-01-06		1	68	箱体	B10K-04-01		1
13	平键	A6×14		1	69	内齿圈	B10K-01-20	57	1
14	平键	A6×14		1	70	圆柱头内六角螺钉	M6×25		6
15	平键	A6×14		1	71	防护网座	B10K-05-01		1
16	输入轴上齿轮	B10K-01-07	25	1	72	防护网	B10K-05-02		1
17	输入轴上轴套	B10K-01-08		1	73	钩	B10B-01-23		1
18	蜗轮	B10B-01-05	23	1	74	拍	B10B-01-22		1
19	垫圈	B10B-01-08		1	75	球	B10B-01-21		1
20	下齿轮	B10B-01-09	18	1	76	料桶	B10B-04-12		1
21	轴用挡圈	17		1	77	料桶座	B10K-04-08		1
22	轴承	101		1	78	料桶压紧把手	B20K-04-24-01/02		左右各1
23	轴承	203		1	79	把手转销	B20K-04-25		2
24	棘轮盖板	B10K-01-15		2	80	料桶定位销	B20J-04-22		2
25	外环	B10K-01-12	33	1	81	弹簧垫圈	8		2
26	内星轮	B10K-01-11		1	82	螺母	M8		2
27	滚柱	B10K-01-13		6	83	立柱	B10K-04-05		1
28	滚柱压簧	B10K-01-14		6	84	圆柱头内六角螺钉	M8×35		4
29	离合器上齿轮	B10B-01-12	21	1	85	外六角螺钉	M6×16		6
30	输出轴齿轮套	B10B-01-13		1	86	压板	B10K-04-11		2
31	输出轴离合器	B10B-01-14		1	87	底座	B10K-04-07		1
32	输出轴	B10K-01-10		1	88	蜗杆轴	B10B-02-04-03		1
33	平键	A6×12		1	89	圆柱销	φ4X20		1
34	平键	A6×28		1	90	蜗杆	B20F-02-04-01		1
35	平键	C6×45		1	91	轴套	B10B-02-04-02		1
36	输出轴齿轮套	B10B-01-13		1	92	蜗杆座	B20F-02-05		1
37	离合器下齿轮	B10B-01-15	28	1	93	沉头螺钉	M5×16		2
38	齿轮挡圈	B10B-01-11		1	94	内六角紧定螺钉	M5×10		1
39	轴承	204		1	95	升降手轮	B20F-02-03		1
40	O型圈	125×3		1	96	升降手柄	B20F-02-01		1
41	轴承座	B10B-04-13		1	97	手柄芯轴	B20F-02-02		1
42	油封	SG25×42×10		1	98	内六角螺钉	M6×12		2
43	油封轴套	B10B-01-16		1	99	内六角螺钉	M6×16		1
44	转座	B10B-01-17		1	100	蜗轮座	B20E-02-06		1
45	平垫	12		1	101	蜗轮	B20F-02-07		1
46	弹簧垫圈	12		1	102	轴用挡圈	20		1
47	螺母	M12		1	103	延伸曲柄	B10B-02-08		1
48	外六角螺钉	M6×16		1	104	内六角螺钉	M6×12		2
49	加大平垫圈	6		1	105	连杆套	B20F-02-10		2
50	行星齿轮	B10B-01-18	17	1	106	连杆	B10B-02-09		1
51	轴承	203		1	107	平垫圈	10		2
52	轴承	104		1	108	弹簧垫圈	10		2
53	平键	C5×14		1	109	六角螺钉	M10×22		1
54	行星轴	B10K-01-19		1	110	六角螺钉	M10×25		1
55	圆锥销	φ8×25		1	111	后盖	B10B-04-15		1
56	拨叉导杆	B10B-03-04		1					