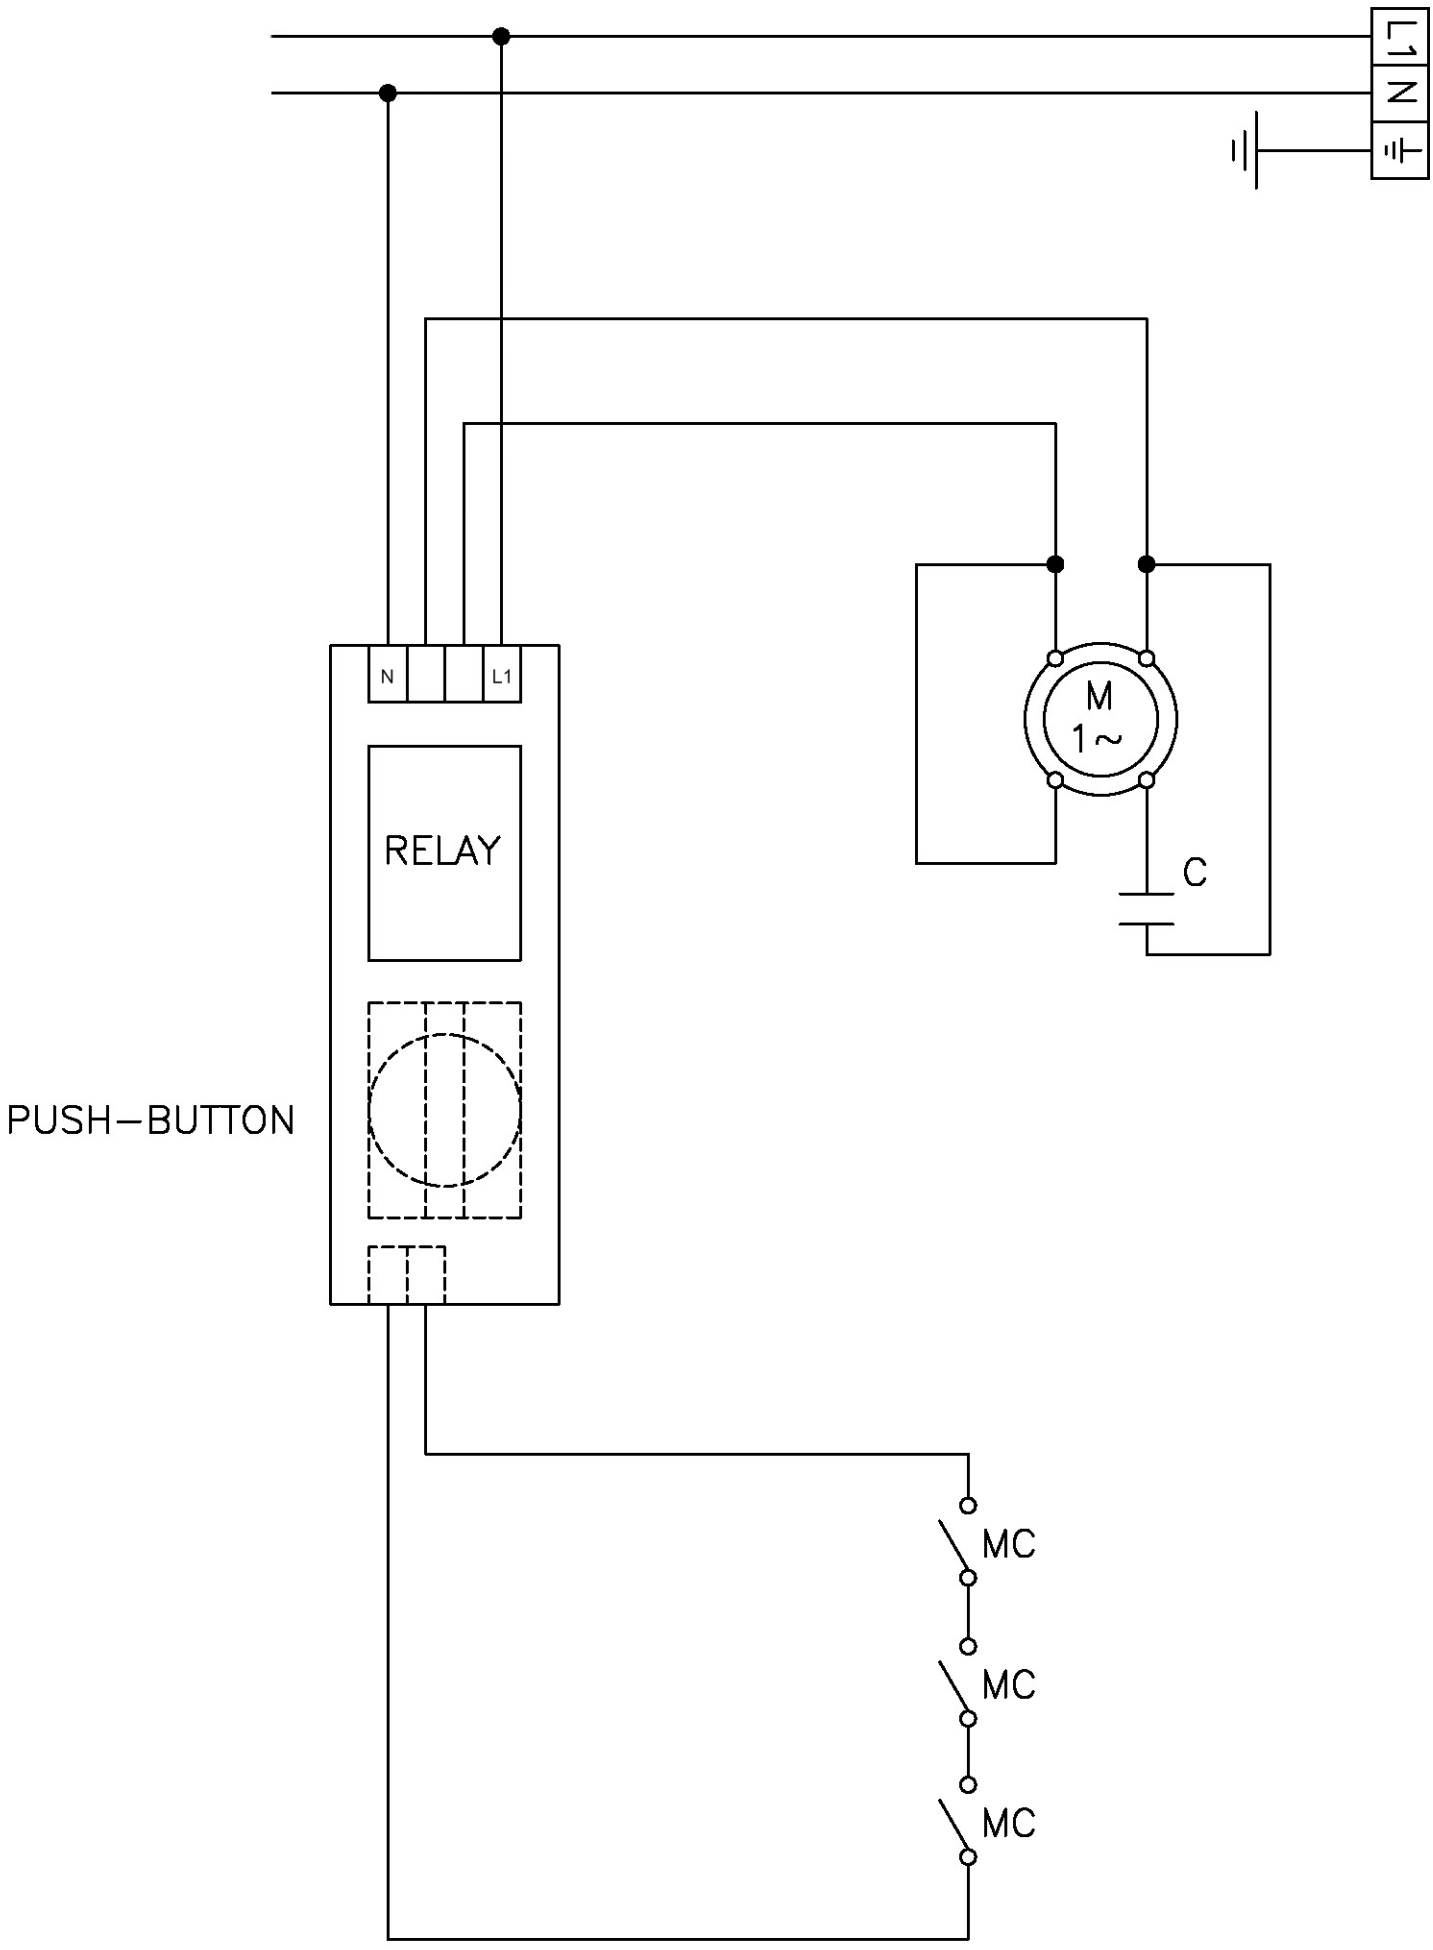
L1
N
N
L1
RELAY
M
1~
C
PUSH–BUTTON
MC
MC
MC