




HOW TO CLEAN & CHANGE BURR OF YOUR ATOM SPECIALTY




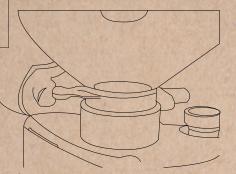


Close the hopper tab and grind the residual coffee beans

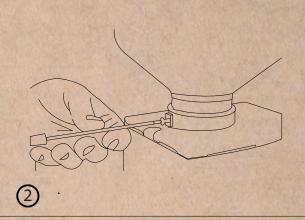

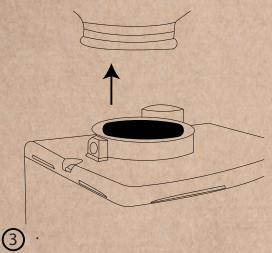


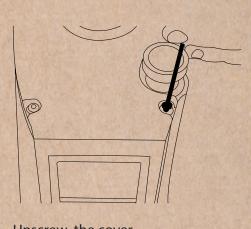


4 Unscrew, the cover

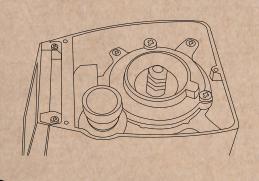


(5)

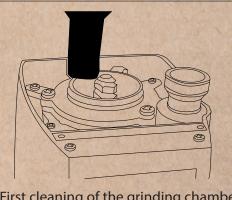

First cleaning of the grinding chamber

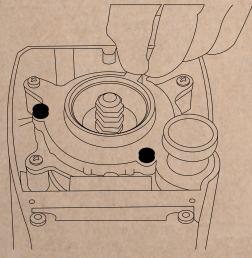


7) Unscrew the upper burr holder

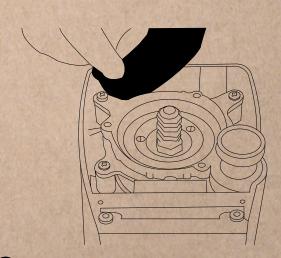

6

HOW TO CLEAN & CHANGE BURR OF YOUR ATOM SPECIALTY




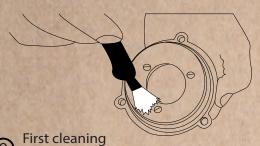

of the upper burr



Draw dust out from the upper burr

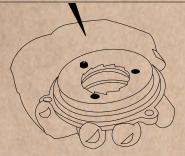


(11) Take the upper burr out from the upper burr holder




Draw dust out from the upper burr holder




Draw dust out from the lower burr

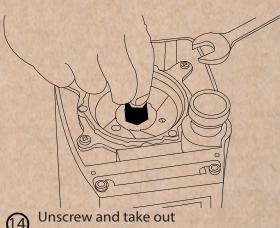


the lower burr

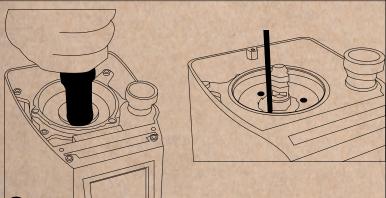


Remove the coffee residue from the grinding chamber Put the lower burr back

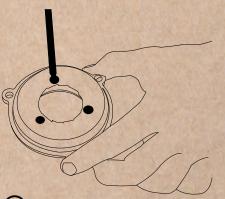

(16) Replace the upper burr on the upper burr holder

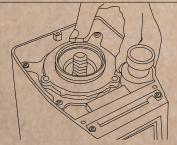

(17) Put the upper burr holder back

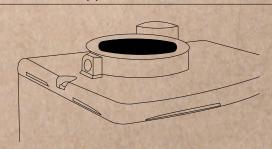

Replace the cover